



Remove all 4 screws

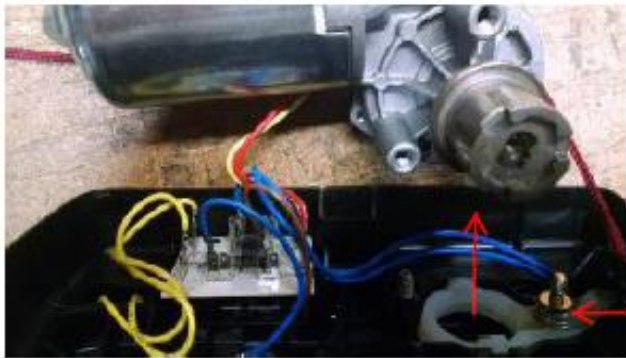

Remove motor carriage from plastic housing

Release Mechanism

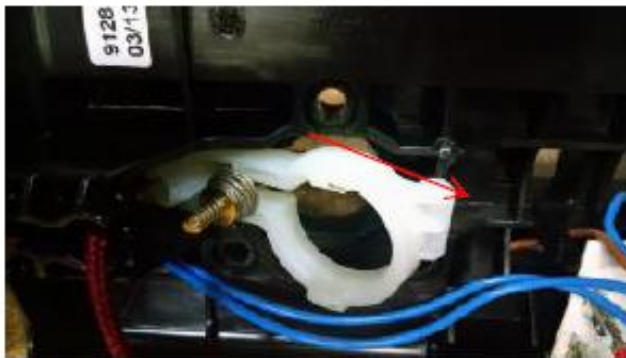

Pull up and out to remove the Release Mechanism.



Release Mechanism support. (make sure this is fitted in the slot made in the plastic housing)