

Program Instructions for SOMMER Wireless Keypad (922 MHz)

Step 1– TURN KEYPAD ON (FIRST TIME USE ONLY)

- Press **#** until **red** and **green** LEDs turn on (5-6 seconds)

Step 2– PROGRAMMING ACCESS CODE

- Press ***** button
- Enter **0000** (factory set code)
- Press ***** button
- Enter new code (max eight digits)
- Press ***** button (**red** and **green** LEDs light up)

Step 3– PROGRAMMING KEYPAD TO OPENER

- Press **red RADIO** button on motor carriage PCB
- Enter access code immediately on keypad
- Press ***** button
- Enter code again (opener will activate)



CHANGING ACCESS CODE


- Press the ***** button
- Enter existing access code
- Press the ***** button
- Enter new access code (max 8 digits)
- Press ***** button (**red** and **green** LEDs light up)

RESETTING/ ERASING ACCESS CODES

- Press ***** button
- Press **#** button
- Enter 9 digit reset code— see reset sticker
- Press ***** button
- Press **#** button (**red** and **green** LEDs light up)



PLEASE NOTE: It is **important** to keep "reset sticker" for future use/ troubleshooting. Each reset code is individual for each keypad. SOMMER recommends placing sticker inside motor carriage cover.

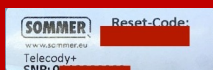

NOTE: 0000 (factory set code) will opener. To change see "Changing Access Code"

TO DELETE RADIO CODE: Press and hold **RADIO** button on carriage PCB until red LED on channel begins to flash (approx. 15 seconds) Press digit/ keypad button to be deleted. This will delete digit from opener receiver.