

Program Instructions for SOMMER Telecode Keypad (922 MHz)



Step 1– TURN KEYPAD ON (FIRST TIME USE ONLY)

- Press and HOLD the **M** button for approximately 8 seconds until both upper **red** and lower **amber** LEDs light up for approx. 2 seconds.

◆ The lower, **amber** LED will flash until the upper **red** LED lights up. Keypad is **NOT** activated until **red** LED illuminates

Step 2– PROGRAMMING ACCESS CODE

- Press **P** button
- Enter the first number access code
- Press **P** button
- Enter the **complete** code
- Press **P** button to complete programming access code

Step 3– PROGRAMMING KEYPAD TO OPENER


- Press **red RADIO** button on motor carriage PCB
- Enter access code immediately on keypad

CHANGING ACCESS CODE


- Press the **P** button
- Enter existing access code
- Press the **P** button
- Enter new access code using the same first digit of old code (max 8 digits)
- Press **P** button to complete programming new access code

RESETTING/ ERASING ACCESS CODES

- Press **M** button
- Press **P** button
- Enter 9 digit reset code— see reset sticker
- Press **M** button
- Press **P** button
- **Red** and **amber** LEDs will light for 2 sec. and all previous codes are deleted

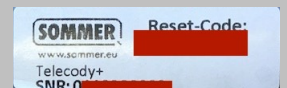

PLEASE NOTE: It is **important** to keep "reset sticker" for future use/ troubleshooting. Each reset code is individual for each keypad. SOMMER recommends placing sticker inside motor carriage cover.

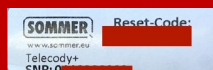

NOTE: Keypad will transmit first digit of original access code to opener

TO DELETE RADIO CODE: Press and hold **RADIO** button on carriage PCB until **red LED** on channel begins to flash (approx. 15 seconds) Press digit/ keypad button to be deleted. This will delete digit from opener receiver.